

Operation Instructions for Acid Neutralizer

Valve Positions

	#1	#2	#3	#4
In-Service Position:	OPEN	CLOSED	OPEN	CLOSED
By-Pass Position:	CLOSED	OPEN	CLOSED	CLOSED
Backwash Position:	CLOSED	OPEN	OPEN	OPEN


Backwash Instructions

1. Backwash system every 3 weeks.
2. Backwash at least 10-15 minutes or until the water clears up.
3. Return the ball valves to the "In-Service Position".

Adding Crystals to the Acid Neutralizer

1. Backwash system first for 10-15 minutes.
2. Put ball valves in "By-Pass Position".
3. Open valve #4 to relieve tank pressure.
4. Remove fill cap and siphon water out.
5. Pour in crystals to full level. (**Don't overfill**)
6. Slowly open valve #1 to refill tank with water.
7. Put fill cap back on. (**Do not overtighten**)
8. Return unit back to "In-Service Position".
9. Open nearest faucet and let the water run for several minutes until the water is clear.

In-Service Position

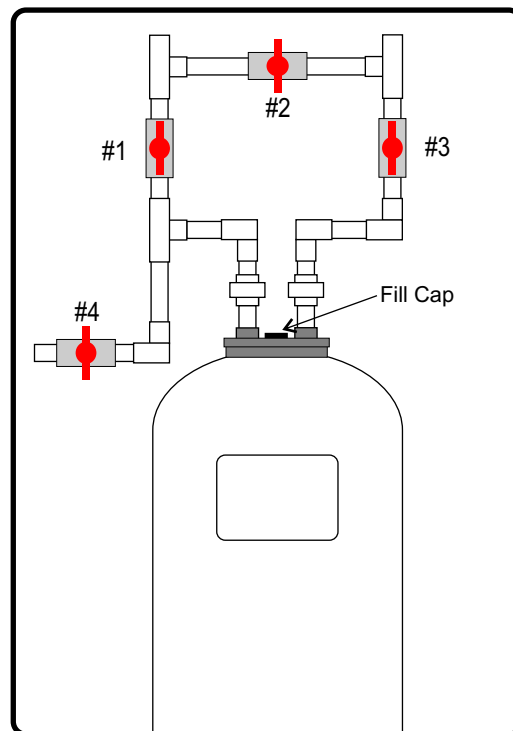

Backwash Position

